

EMPORIA EMERGENCY CALL FUNCTION

You can save up to five emergency numbers (family members, friends and official institutions).

- In an emergency press and hold the emergency button on the back of the phone. (This works even when the keypad is locked.)
- The five preset numbers will be dialled automatically in the order you have saved them.
If it is not possible to get through to anyone on the first number, the second number will automatically be dialled.
If it is not possible to get through to anyone on the second number, the third number will automatically be dialled, and so on. (The phone will go through a list of five numbers a maximum of three times.)
- At the same time as each emergency call, a text message (SMS) will be sent to the contact, saying: »**You are about to receive an emergency call. An audible warning signal will sound when you answer the call. Please press the 0 key three times to establish the connection.**«

Note: The contact must press the 0 key within 60 seconds, or the call will be disconnected (to prevent your emergency call going through to a contact's mailbox).

- From the moment you make an emergency call, your emporia phone will automatically answer any incoming calls for one hour. To disable this function, press and hold  for 3 sec. or turn your device off completely using  and then turn it on again.
- To cancel the emergency call, press and hold .
- During the emergency call, a warning tone will sound continuously, to alert anyone nearby and the person being called.
- If you do not have any emergency numbers saved, have no credit on your prepaid phone card or are connected to a foreign network without permission (e.g. roaming is not activated), 112 will be dialled when you press the emergency button.

Note: If you want to add the number of an official institution such as the police or fire brigade as an emergency number, you must check that this is okay with the respective institution beforehand. We do not assume liability for any costs incurred through you calling such an institution by mistake.

Adding/editing emergency numbers:

In the **Settings** menu ⇒ **Emergency numbers**

⇒ **Add emergency number**

⇒ Select an entry (e.g. **EmNo. 1**) by pressing  

⇒ Select **OK** by pressing 

⇒ Select **Private** or **Help organisation** 

⇒ Select a contact

Activating the emergency button:

In the **Settings** menu ⇒ **Emergency button** ⇒ **On/Off**

Pre alarm:

The pre alarm is a warning tone that sounds for ten seconds and alerts anyone nearby to the emergency.

After this, the emergency call sequence starts.

In the **Settings** menu ⇒ **Emergency numbers**

⇒ **Pre alarm** ⇒ **On/Off**

SETTINGS

In the **Settings** menu ⇒

Sound & alerts:

You can personalise the settings for tones, signals and vibration or select a set of predefined settings (profile).

- Menu items: **Ringtone, Alarm melody, Ringer volume, Silent/Sleep mode, Meeting/Theater mode, Maximum/Bus mode, Increasing ring, Vibra for call, Vibra for alarm, Key tones, Message tone, Vibra for messages, Handset volume, Handsfree volume, Confirmation tone, Emergency tone**
- **Silent/Sleep mode** profile
Visual notifications only (torch LED flashes, notifications on the display), no ringtone, no vibration function
- **Meeting/Theater mode** profile
Visual notifications (torch LED flashes, notifications on the display), device vibrates, no ringtone
- **Maximum/Bus mode** profile
Key tones, SMS tone and vibration function activated, ringtone volume is set on maximum

Voicemail number:

Enter the number for your mailbox. You will find this number in the documents supplied by your network provider.

Security settings:

- **PIN:** PIN request on/off, change PIN
- **Phone code:** on/off, change (factory preset code: 1234)

Master reset:

You can restore all the factory settings on your phone (factory preset code: 1234).

CAMERA AND PHOTO ALBUM

Your phone has a camera. You will find photos you have taken in the menu under **Photo album**.

Taking a photo:

In standby mode, enable the camera by pressing .

⇒ Press  to take a photo.

Camera options:

If the camera is active press  or in the **Settings** menu ⇒ **Camera settings** ⇒ **Self timer, Effect, Size, Quality** and **Night mode**.

Photo album:

Your photos will be saved in the **Photo album** menu.

-  and/or  let you flick through the photo album.
- Pressing  opens **Options** for the selected picture.
Available options: **View, Send, Wallpaper, Contact photo, Rename, Delete, Delete all** and **Memory**

Note: You can connect your phone to a PC using the USB data cable and transfer your photos.

Note: Using a micro SD card will increase the storage capacity of your phone. You can purchase these cards from electronics stores.

TOOLS

In the **Tools** menu ⇒

Alarm clock:

- **Set time:** Enter the time and confirm. The alarm clock will now go off at the time you have set every day.
- **Off:** Disable alarm clock
Switch off the ringing alarm clock by pressing .
Mute the alarm by pressing  or  (it will ring again after five minutes).

Birthday reminder:

- Entering a birthday: **New birthday**
⇒ Select **From contacts** or **Enter Name**
⇒ Under **Set date**, enter the birthday date and
⇒ under **Reminder time**, enter the time of day for the alarm

Bluetooth:

- This function allows you to use Bluetooth-enabled handsfree kits wirelessly.
- **Bluetooth on/off:**
Enable/disable Bluetooth
- **Connect** ⇒ **Search for new devices:**
Search for devices you want to connect
⇒ Select devices by pressing .
The next time you enable Bluetooth, devices that have been connected before will be recognised and connected automatically.

CHARGING UNIT

Charging the phone using the charging unit:

Plug the charging cable into the port on the back of the charging unit, and slot the phone into the charging unit.

Note: When the phone is being charged by the charging unit, the vibration function for incoming calls is automatically disabled. This prevents the charging unit from moving without you wanting it to because of the phone vibrating. The vibration function is activated again when you remove the phone from the charging unit.

Using the phone while it is on charge:

- There are a number of ways to accept a call while your phone is being charged by the charging unit:
- Leave the phone in the charging unit and press the green button. The call will be taken in hands-free mode.
- Remove the phone from the charging unit. The call will be accepted automatically when you do this.
- If you put the phone on charge during a call, the connection will be maintained and hands-free mode will be activated.

FREQUENTLY ASKED QUESTIONS

The display screen is just blank/black:

- Energy-saving is activated:
Press any key.
- The keypad is locked and energy-saving mode is activated:
Press  or the green button.
- The phone is switched off:
Press  for two seconds to turn it on.
- The battery is completely empty, the phone has switched itself off: Charge the battery.

ENGLISH



emporia EUPHORIA

For information on simply making and receiving calls, go to www.emporia.eu

PartNo: V50_ShortManual-V5_54299-ENG | 201610 | Subject to mistakes, printing errors and technical changes.

INSERTING A SIM CARD

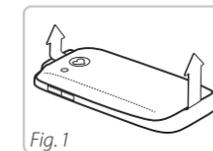


Fig. 1

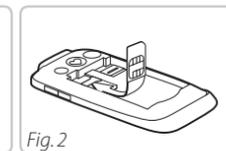


Fig. 2

Fig. 1: Remove the battery cover.

Fig. 2: Slide the SIM card into the SIM card holder with the gold contacts facing down.

INSERTING AND CHARGING THE BATTERY

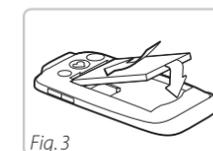


Fig. 3

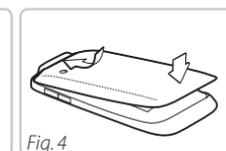


Fig. 4

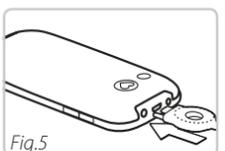



Fig. 5

Fig. 3: Insert the battery, making sure that the battery contacts touch the phone's gold contacts.

Fig. 4: Put the battery cover on the phone and press it down.

Fig. 5: Plug the charging cable into the USB port on the top of the phone.

Attention: Charge the battery for at least four hours before using it the first time. Only use batteries and chargers that are permitted for use with this specific model.

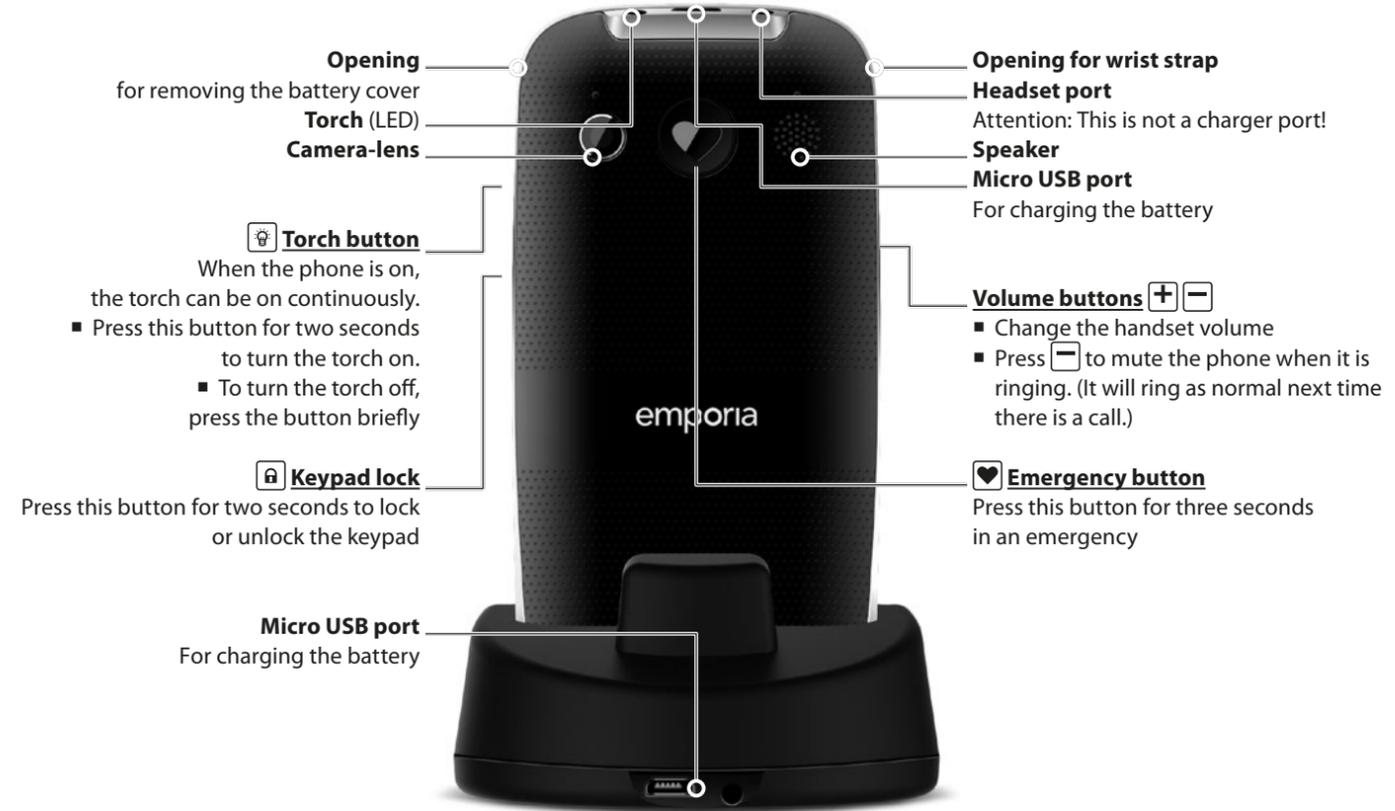

Symbols on the display	Network signal strength	Battery indicator	Missed call	Profile: Silent/Sleep mode	Profile: Meeting/Theater mode	Bluetooth activated	Alarm clock on
	Roaming (abroad)	New message	Call forwarding	Profile: Maximum	Headset connected	Bluetooth connected	Keypad locked

GETTING STARTED

- Pressing the key for at least two seconds switches the phone on.
 - To turn the phone off, press the key for two seconds again.
- When using a new SIM card for the first time:**
- Enter the four-digit PIN code (personal identification number)
- ⇒ Press to confirm the code.
- Note: The PIN code is a four-digit number that is intended to prevent somebody else from being able to switch on your mobile phone. You have a maximum of three attempts to enter the correct number. If you enter the wrong number three times in a row, you will only be able to unblock the SIM card with the PUK code. You will find the PIN code and PUK code in the documents supplied by your network operator.**
- ⇒ Select a **Language** by pressing and ⇒
- ⇒ **Set time** ⇒ ⇒ **Set date** ⇒
- ⇒ Select a **Text size** by pressing and :
- You can choose **Small** or **Large** ⇒

- Incoming call:**
- To answer: Accept the call by pressing .
 - To reject: Press .
 - To mute the ringtone temporarily: Press the button (on the side of the phone).

To end a call: Press .

Dialling: Enter the number (incl. area code) you want to dial using the keypad ⇒ Start the call by pressing .

Redialling:

Press to bring up the **call info**.

⇒ Press and to select a number.

⇒ Start the call by pressing .

Hands-free: Press during a call to open the **Options** and turn the hands-free function on or off.

Standby mode:

In standby mode the phone is on, but is not running any applications (calls, SMS messages, etc.).

- Accessing the menu:**
- Press to open the menu.
 - Scrolling with and/or through the menu items: **Messages, Photo album, Tools, Contacts, Call info, or Settings**
 - Press to select the option shown on the screen (above the keys).
 - To return to standby mode, press several times.

Saving energy:

If a few seconds pass without the phone receiving any input from you, the screen will go blank to save energy. In the event of an incoming call or you pressing any key, the screen will automatically light up again.

If the keypad is set to lock automatically, the phone will only respond if the green button or the key is pressed.

CONTACTS

Always save names and numbers with the international dialling code, e.g. +44 for the United Kingdom, +1 for the United States and +61 for Australia.

Press to open the menu.

⇒ Go to **Contacts** by pressing ⇒

⇒ Menu items: **Search name, Add contact, Edit contact, Delete, Send contact via SMS, Copy contact, My number, Speed dial keys, Emergency numbers, Phone book settings** and **SMS in PhoneBK**.

Adding a contact (name and number):

Open the menu with ⇒ Press to go to **Contact**.

⇒ Go to **Add contact** by pressing ⇒

⇒ Enter a name (see the section **Writing a message** for text input information). ⇒ ⇒ Insert the number

⇒ **Contact photo** Yes/No ⇒ to save press

Searching for contacts:

Press to open **Contacts** ⇒

- Press and to flick through the entries
- or enter the first few letters of the entry you're looking for using the keypad (and continue flicking with if necessary). ⇒

Once you've selected an entry, press to start a call.

Receiving a new contact via SMS:

In the **Contacts** menu ⇒ Enable the **SMS in contacts** function to receive new entries via SMS.

Indicate whether you want to be able to receive new entries from anyone (**On**) or only from contacts already saved on the phone (**Only from PhoneBk**). The phone number will automatically be stored in your contacts when you receive an SMS with the following content:

#Name#Number#, e.g.: #Martin#436641234567#

SMS MESSAGES

SMS (Short Message Service) messages are short written messages.

Writing a message:

Open the menu by pressing ⇒ **Messages** ⇒

⇒ **Write message** ⇒ . Enter text using the keypad.

- Each key has several characters assigned to it, which can be selected by pressing the respective key several times. (E.g. 2x , 1x , 3x , 3x , and 3x for **Hallo**)

.,!' " @ : 1	p q r s 7 8 \$
a b c 2 ä æ å à	t u v 8 ü ù
d e f 3 è ê ë	w x y z 9 ý þ
g h i 4 i i i i	Blank space; 0
j k l 5 £	Special characters: .,?!' " ()
m n o 6 ö ø ó	@ \ / : _ ; + - * = % & < > ...

- Press to change the input method:
- abc**: Lower case only
- ABC**: Upper case only
- 123**: Digits
- Delete all: press and hold .

Sending an SMS:

Select **Send to** by pressing twice and then insert a number, or press to search in contacts before pressing again to send.

Receiving a message:

A short beep and a message on the display informs you of new messages. Pressing allows you to read the message immediately or view it in your received message list via the **Messages** menu ⇒ **Received**.

GUARANTEE AND SERVICE

GUARANTEE

- This guarantee is only valid if the original batteries supplied by emporia have been used.
- Mobile phone: 24 months
- Battery: 6 months

SUPPORT

- **Emporia Service Centre**
Industriezeile 36 · 4020 Linz · Austria · www.emporia.eu
- **Germany:** +49 · (0) 800 · 400 4711
- **Austria:** +43 · (0) 732 · 77 77 17 · 446
- **Switzerland:** +41 · (0) 8484 · 50004

SCOPE OF DELIVERY

- Mobile phone
- Battery: Li-Ion 3.7V / 1000mAh
- USB cable with USB AC adapter
- Charging unit

TECHNICAL DATA

- Dual-band GSM 900/1800 MHz
- Dimensions: 120 x 59 x 12.5 mm
- Weight: 90 g
- Battery: Li-Ion 3.7V/1000mAh (replaceable)
- Internal antenna: SAR 1.2 W/kg
- Standby time: 300 hrs *
- Talk time: 200 min *
(* Depending on network coverage and activated applications the battery life can be reduced.)
- Bluetooth 3.0 HSP/HFP

SAFETY INFORMATION

- Turn off the phone in hospitals and whenever you are near medical equipment. There should always be a distance of at least 20cm between pacemakers and the phone when it is on.
- Never try to control a vehicle while holding the phone in your hand. Always comply with relevant national laws and traffic regulations.
- Turn off the phone whenever you are travelling in an aeroplane.
- The phone must be switched off whenever it is near a petrol station or other places with explosive substances.
- Never shine the LED torch in the eyes of people or animals!
(Protection class 3)
- To prevent hearing impairments, do not use the phone on a high speaker volume for extended periods of time. Do not hold the phone to your ear when the hands-free mode is activated or the emergency button has been pressed.
- Using a headset on a high volume can cause hearing impairments. Check the volume of the headset you are using.
- The phone and the accessories may contain small parts. Keep the phone out of the reach of young children.
- As a precaution, we recommend disconnecting the phone from the charger during thunderstorms.
- The mains adapter serves as a separator between the product and your mains supply. The mains supply must be close to the device and easily accessible.



INTENDED USE

- This phone is robust and designed for mobile use. However, it still needs to be protected from moisture (rain, bathroom water, etc.) and heavy impacts.
- Do not leave it where it will be directly exposed to the sun.
- Using the phone for any purpose other than that described above will result in damage to the product. Doing this also entails hazards such as fire, electric shocks, etc. This product must not be changed or modified, and the casing must not be opened.
- The adapter is only suitable for use in conjunction with a standard household mains socket that is connected to your electrical grid and uses 100-240 volts/50/60Hz (10/16A) of alternating voltage.

DISPOSAL

Disposing of the packaging:

The packaging and packaging aids are recyclable and should be made available for reuse.



Disposing of the battery:

Batteries should never be disposed of as domestic refuse!

As a consumer you are legally required to return used batteries.

They can be handed in at one of your community's local collection points or at specialised stores.



Disposing of the device:

If this product ever wears out, please don't dispose of it as domestic refuse. To ensure you don't cause damage to the environment, take it to a collection station or recycling centre where used devices are processed for recycling in an environmentally friendly manner.



DECLARATION OF CONFORMITY (DOC)

We, Emporia Telecom GmbH & Co.KG., Industriezeile 36, 4020 Linz, Austria, hereby declare that the construction of the device described in the following complies with the relevant EC directives stated below.

Item description: **Dual Band Mobile Phone**

Item number: **V50**

Relevant EC directives: Directive 1999/5/EC on radio equipment and telecommunications terminal equipment (R&TTE Directive 1999/5/EC)

Harmonised EN basic and engineering standards:

Health: EN 50332-1 (2000);

EN 50360 (2001) +A1 (2012);

EN 50566 (2013);

EN 62209-1 (2006) /-2 (2010);

EN 62479 (2010)

Safety: EN 60950-1 (2006) +A11 (2009) +A1 (2010)
+A12 (2011)

EMC: EN 301 489-1 V1.9.2; /-7 (V1.3.1); /-17 (V2.2.1);

EN 55013 (2001) +A2 (2006);

EN 55020 (2007) +A11 (2011)

Radio spectrum: EN 300 328 (V1.7.1); EN 301 511 (V9.0.2)

CE 0678

Eveline Pupeter
emporia Telecom



12.10.2014, Linz/Austria