

TOOLS

Position

Your mobile phone has a GPS unit (Global Positioning System) to support the emergency function. This feature allows to locate the mobile phone worldwide, and to determine your exact location.

Note: The enabled position determination requires a lot of electricity, thereby reducing the operating time of mobile phone in continuous operation to 36 hours.

Note: The GPS functionality is inside buildings can not be guaranteed. If after a few minutes, you still have no position, check if you have a direct view to the sky (satellites), and/or go away from high walls of buildings.

Note: Rescue organizations will receive the positioning GPS coordinates. Recipients will receive a private google maps link.

Note: If your device is not able to receive a GPS signal, the last saved position will be automatically sent with an appropriate notice.

■ **Enable/Disable positioning:** enter menu **Tools** ⇒ enter **Position** with **OK** ⇒ **Position on/off**

■ **Share your position with friends:**

Selected contacts have the opportunity to your current position interrogate another mobile phone.

These contacts are defined in your **Friends list**.

Do not worry: numbers that are not on this list can not determine your position.

Go to **Tools** ⇒ **Position** ⇒ **Show friend list** to see which of your contacts is it allowed to check your position.

Note: To enter, delete or edit the Friends list please contact your service provider.

Bluetooth

■ **Enable/Disable Bluetooth:** enter menu **Tools** ⇒ enter **Bluetooth** with **OK** ⇒ **Bluetooth on/off**

■ **Pairing devices:** enter menu **Tools** ⇒

enter **Bluetooth** with **OK** ⇒ **Connections** **OK** ⇒

Search for new devices **OK** to search for available devices ⇒ choose the desired device ⇒ confirm with **OK**.

Paired devices are automatically recognized the next time, if they are in range.

Alarm

Press **OK** in standby mode ⇒

■ **New time:** enable alarm clock ⇒ enter time ⇒ confirm with **OK**.

The alarm clock rings every day at this time.

■ **Off:** disable alarm clock

Press **OK** to stop a ringing alarm.

Mute an ringing alarm by pressing **OK** (rings again in a minute).

FREQUENTLY ASKED QUESTIONS

The mobile phone is not responding:

Remove battery, re-insert and switch on the device.

If still no response, please contact the Service Center.

The charging process will not start:

It may take a few minutes. If no response after 10 minutes, please contact the Service Center.

EMPORIA EMERGENCY BUTTON

You can store up to 5 emergency numbers (family, neighbours, friends, emergency services).

■ In case of an emergency press the emergency button on the reverse side of the mobile telephone either for 3 seconds or 3 times within 3 seconds. The emergency key will still work when the key lock is enabled.

By pressing the emergency button the emergency sequence is started. Up to 5 numbers will be called in a predetermined order until someone answers the emergency call.

This process is repeated 3 times.

■ If no emergency number is defined, your prepaid-card is out of charge or you are outside of the home network of your network operator, the international emergency number 112 will be called.

■ During the emergency sequence a warning tone is played back, to inform the people around you about the emergency.

PleaseNote: By answering the emergency call, the called person have to dial the **0 3 times, during the first minute of the call. (Dialing the 3x **0** by the receiver of the call ensures that your emergency call is not forwarded to an answering machine or voicemail).**

Parallel to the emergency calls in the background, your position is determined. If this information is available, a text message will be sent to all emergency numbers, including your current location or address (Google-Maps-Link). Through the use of network services (emergency SMS) may incur charges.

Saving emergency numbers:

Go to **Phone book** ⇒ **Emergency numbers** ⇒

Add Emerg. No ⇒ choose **EmNo.** (1-5) ⇒ specify whether it is a **Private number** or a **Helporganisation** ⇒

choose a contact in **Phone book** ⇒ finished

PleaseNote: If you choose Private number the receiver have to dial 3x **0. By a Helporganisation, a recall is not required.**

Enable the emergency button:

Go to **Phone book** ⇒ **Emergency numbers** ⇒

Emergency button ⇒ **On/Off**

WARRANTY

■ This warranty is valid only if original emporia batteries were used.

■ No warranty if battery door screwed incomplete.

■ Mobil phone: 12 month ■ Battery: 6 month

SUPPORT

■ **Emporia Service Center**

Industriezeile 36 · 4020 Linz · Austria · www.emporia.at

■ **Deutschland:** 0049 (0)180 · 59 13 181

■ **Österreich:** 0043 (0)732 · 77 77 17 · 446

■ **Schweiz:** 0041 (0)8484 · 50004

DISPOSAL

Disposal of packaging:

Packaging and packaging materials are recyclable and should always be returned.

Disposal of batteries:

Batteries must not be disposed of with domestic rubbish!

As a consumer you are required by law to recycle used batteries.

You may return them to your local collection point or to the dealer.

Disposal of the device:

Do not throw your mobile phone into the garbage, once it has outlived its usefulness. For the benefit of the environment, take it to a recycling location for used phones so it can be processed in an environmentally responsible way.



DECLARATION OF CONFORMITY (DOC)

We, Emporia Telecom Produktions- und Vertriebs- GmbH & Co. KG. declare under our sole responsibility that the following product is in conformity with the following relevant harmonised standards.

Kind of product: **Dual Band Mobile Phone**

Article number: **V33i**

Governing EU-regulations: Council Directive R&TTE 1999/5/EC

Radio equipment and telecommunications terminal equipment

Harmonized EN standards:

Safety: EN 60950-1:2006 +A11:2009 + A1:2010

Health: EN 50360:2001

EMC: ETSI EN 301 489-1 V 1.8.1 (2008-04)

ETSI EN 301 489-3 V 1.4.1 (2002-08)

ETSI EN 301 489-7 V 1.3.1 (2005-11)

ETSI EN 301 489-17 V 2.1.1 (2009-05)

Radio spectrum: ETSI EN 300 328 V 1.7.1 (2006-10)

ETSI EN 300 220-2 V 2.3.1 (2012-02)

ETSI EN 300 440-2 V 1.4.1 (2010-08)

ETSI EN 301 511 V 9.0.2 (2003-03)

CE 1313

Eveline Pupeter

CEO

01.04.2012, Linz/Austria

TECHNICAL PRODUCT DESCRIPTION

- Dualband GSM 900/1800MHz
- Battery: Li-Ion 3.7V / 1750mAh
- Internal antenna: SAR 0.799 W/kg
- Stand-by-time: 400 h (Applications, such as Bluetooth or GPS reduce the operating time up to 80%.)
- Dimensions: 120x60x20 mm
- Weight: 142 g

PACKAGE CONTENT

 
- Mobil phone
- Charging cable
- Battery: Li-Ion 3.7V / 1750mAh

CORRECT USAGE

- This mobile phone is rugged and provided in accordance with IP67 for mobile use.
- Do not expose it to direct sunlight.
- Any utilization other than described above will cause damage to the device, and may be hazardous (electric shock, fire, etc.). The entire product must not be altered or rebuilt, and the housing must not be opened.
- The power plug is suitable only for use with residential-type outlets of the public mains with 230 Volt/ 50 Hz (10/16A) alternating current.

SAFETY INSTRUCTIONS

- Switch off the mobile phone in hospitals or in the vicinity of medical equipment, as the mobile phone may cause them to malfunction. Keep your mobile phone a minimum distance of 20 cm away from pacemakers, if it is turned on.
- Never drive a car while holding the mobile phone in your hand. Observe national law and traffic regulations governing the use of mobile phones in traffic.
- Always turn off your mobile phone inside an airplane.
- You must switch off the mobile phone in the vicinity of petrol stations and other places with explosive materials.
- Don't shine the light directly into the eyes of people or animals.
- If the speaker or headset is set to a high volume this can cause hearing damage. Never hold the phone to your ear when the speakerphone mode is activated or the emergency button is pressed.
- The device and its accessories may contain small parts. Keep this product out of reach of small children.
- As a precaution, we recommend disconnecting the charger from the phone during a thunderstorm.

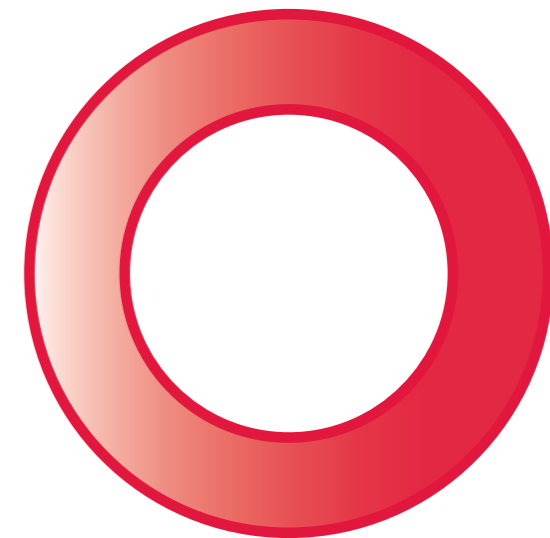

emporia **SOLIDplus**

PartNo: V33i_[SW-V33i_V1.11]_ShortManual-V1A_54175-ENG_201208

INSERTING THE SIM CARD

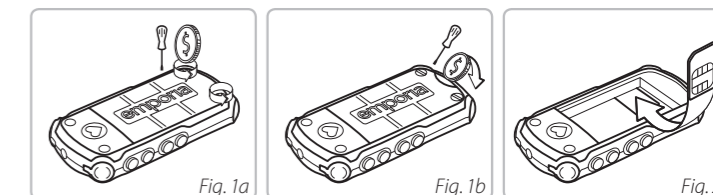 


Fig. 1a+b: Remove the battery cover

Fig. 2: Insert the SIM card with the gold chip down

INSERT THE BATTERY AND CHARGING

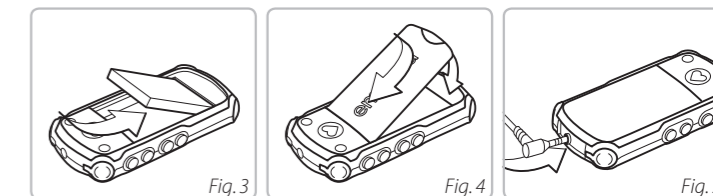 



Fig. 3: The battery contacts have to face the gold coloured contacts of the mobile phone.

Fig. 4: Slide battery cover back to its previous position until its locked with a click. Tighten the screws.

Fig. 5: open the rubber cover on the bottom of the phone and plug the charging cable into the socket.

- A battery icon on the display informs about the loading progress
- Battery is charging: bars in the battery icon fill up
- battery is fully charged: bars in the battery icon stop moving

 Please note: The battery should be charged for at least 4 hours before your first call. Use only batteries and chargers are approved for use with this model.

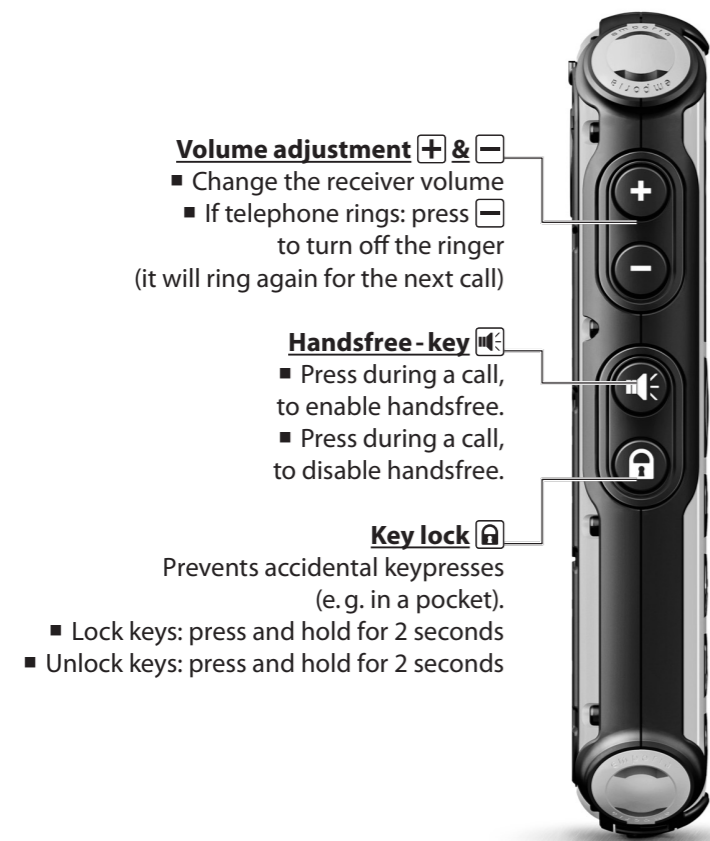

Volume adjustment + & -

- Change the receiver volume
- If telephone rings: press - to turn off the ringer (it will ring again for the next call)

Handsfree - key

- Press during a call, to enable handsfree.
- Press during a call, to disable handsfree.

Key lock

Prevents accidental keypresses (e.g. in a pocket).

- Lock keys: press and hold for 2 seconds
- Unlock keys: press and hold for 2 seconds



Loudspeaker

Make or receive a call/OK key

- Make or receive a call
- In menu: select
- In standby mode: access to **Call list** (dialled, received, missed calls)

0 - key / Voicemail key

- Press and hold: connect to your voicemail
- When writing (SMS, phone book): insert a space

Star key

- Press twice: + (for country codes, i.e. +44 for UK)
- When writing: special symbols (?!, () @ - + \$ € etc)

Display (=Screen)

End Call/Back/Delete key

 
- During a call: end call
- In menu: one step back
- When entering numbers or letters: delete
- To switch on or off: press and hold for 2 seconds

Arrow keys

- Scroll through **Phone book** and menus
- In standby mode access the **Favourite** with
- In standby mode access **Phone book** with

Pound key

When writing: Switch from upper to lower case or numbers

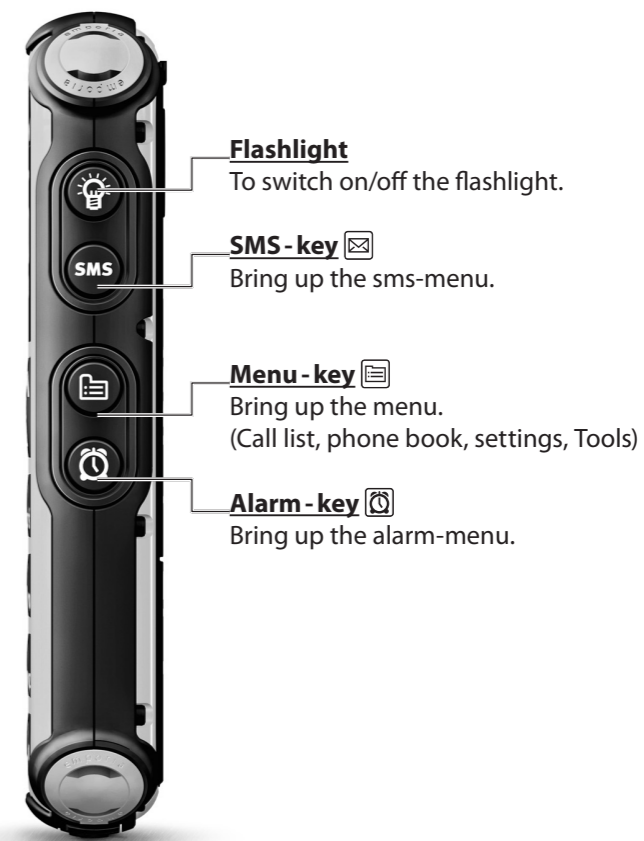

Flashlight

To switch on/off the flashlight.

SMS - key

Bring up the sms-menu.

Menu - key

Bring up the menu. (Call list, phone book, settings, Tools)

Alarm - key

Bring up the alarm-menu.

DISPLAY SYMBOLS	
Signal strength	Battery indicator
Roaming	Missed call
New SMS	Call forwarding
Silence/Sleep	Maximum/Bus
Meeting/Theatre	Alarm on
Bluetooth enabled	GPS enable
Bluetooth device paired	GPS fixed

FIRST STEPS

Press and hold the key for 2 seconds to switch on the phone. To turn off, press and hold 2 seconds again. When using a new SIM card, enter the 4 digit PIN Code (Personal Identification Number) and confirm with **OK**. **Note: The PIN-Code is a 4-digit number combination preventing others from switching on your mobile phone.**

- Incoming call:**
- Pick up: press the **OK**-key
 - Reject: press the key
 - Muting the ringer temporarily: press the key
- End a call:** press the key

Dialing: Enter the phone number with the keypad (including area code with 0) => start call with **OK**.

Redaillist: Enter the **Redaillist** by press the **OK**-key. => Select a number with or from a redaillist (**Missed calls, Dialled numbers or Received calls**). => Start the call with **OK**.

Handsfree: Press key during a call, to enable or disable the handsfree function.

Standby mode: In standby mode the phone is turned on, but no active applications (calling, messaging, ...) are running.

- Press the **OK**-key or key to select the shown (above the keys) option.
- After a few seconds without input, the display is switched off to save power. By an incoming call or pressing any key, the screen turns on again automatically.
- To return to the standby screen, press the key repeatedly or press and hold the key until the standby screen appears.
- If you select a menu item, without confirming with **OK**, an information text about this menu item is shown after a while automatically. To hide the text, press the button.

Enter the menu: press the key
Scroll through menu: use and/or
Chose/confirm: with **OK**

Enter menu with => enter **Settings** with, **OK** => **Security settings:** Edit the PIN code or to **Activate/Deactivate** the PIN code query or the **Phonecode** (default: 1234).

Favourite keys: With a click to your most important function.

PHONEBOOK

Save names and numbers (always include the area code, e.g. +44 for UK) Enter menu with => enter **Phone book** with, **OK** => menu items: **Search name, Add contact, Own number, Emergency numbers** (Add Emerg. No., Change sequence, Delete Emerg. No., Emergency button on/off), **Copy contact, Top 5, Edit contact, Delete contact, Send contact by SMS, SMS in PhoneBk, Mailbox number, PhoneBk settings.**

Save a contact (name & number): Enter menu with => enter **Phone book** with, **OK** => choose **Add contact** with, **OK** => enter number => enter name with the keypad (See SMS-chapter for writing text) => => save with **OK**.

Search a Phone book entry: Enter the **Phone book** by pressing in standby mode => Scroll through the entries with and, => Or... use **Search name:** enter the initial letters of the searched name (may continue to scroll with). => When the requested name is shown, press **OK** to start call.

Accessing the Phone book via SMS: In the **Phone book** menu => enable **SMS in PhoneBk**, to receive phonebook entries by SMS message. Specify that only stored contacts may send phone book entries (**Only from PhoneBk**) to you. The phone number is automatically saved in your phone book, if the messages is written in the following format: #Name#Nummer#, e.g.: #Martin#+436641234567#

SMS MESSAGE

SMS (Short Message Service) is a short text messages, including a max. of 160 signs. Costs are only incurred during shipping, but not at the reception.

Writing text: Enter menu with => enter **SMS Message** with **OK** => choose **New SMS** with **OK**. Entering text with the keypad. Every key represents several signs, depending on how often you press the key. (e.g. 2x [4], 1x [2], 3x [5], 3x [5], 3x [6] for **hallo**)

1 .,!? " '@ : 1	7 p q r s 7 B \$
2 a b c 2 ä æ å à	8 t u v 8 ü ù ú
3 d e f 3 è è è	9 w x y z 9 ý þ
4 g h i 4 i i i i	0 Space; 0
5 j k l 5 £	* special character: ., . ? ; : ! " " "
6 m n o 6 ö ø ó	@ _ ~ & + - () < > { } [] ...

Use the # key, to Choose from 4 Writing Styles:
 ■ **abc** => lower case ■ **Abc** => Upper and lower
 ■ **ABC** => upper case ■ **123** => numbers

Sending SMS: After typing the text, press 2x **OK** **Send**. Enter the number or choose from phonebook (**OK**, scroll to the contact and select with **OK**). Press **OK** again to send the message.

Receiving an SMS: A short signal and an display-promp inform you about a new, incoming SMS message. Whit **OK** you ou can read the message now or enter the menu **SMS Message** => **Received SMS** to access the list of received messages.